


Installing guide for the manure flap in a Premiumfloor slat Typ fattening 800 x 400

Install only in this direction of the slat.



Testing the position of the manure flap.

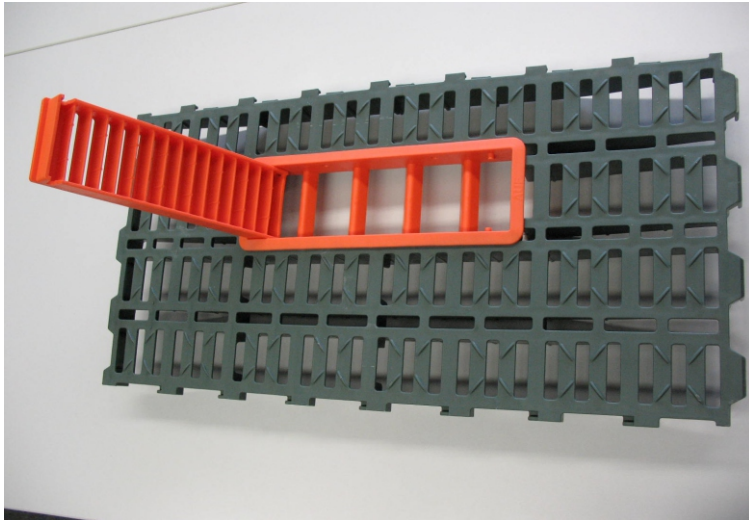

Saw out the recess with the jigsaw.



Mark the section to saw out.



Installing guide for the manure flap in a Premiumfloor slat Typ fattening 800 x 400

Install manure flap.



View from underneath.



Press the manure flap against the slat and fix it with 4 Spax bolts 3,5x20 mm.

